

VT340-VT540



(1) FEATURES

- 1. The air circuit layout is simple and intuitive, reducing thewiring
- 2. More reliable air circuit structure design
- 3. Less installation space and convenient installation
- 4. Various types of solenoid valves can be installed optionally
- 5. Centralized air supply and exhaust
- 6. Modular design, any number of valve combinations


SPECIFICATION

	V7540		VTO 40			
Model No.	VT540	VT340				
Working ambient temperature	-5 °C ~-50 °C					
Max pressure	10bar					
Working Pressure	1.5~7bar					
Working medium	Com	pressed Air (filtere	d by 40µm filter screen)			
Size	Width 144mm,height 72.5mm,length 252.5	5mm (12 valves)	Width 99.3mm,height 61.1mm,length 175.4mm(12valves)			
Rated voltage		DC24V	/±10%			
Bus interface		DB-2	5 pin			
Input Port	G1/4		G1/4 (max ϕ 8 Quick connector)			
Exhaust Port	G1/4 G1/4(max φ 8 Quick connec					
Working port	φ 6/ φ 4 Quick connector					
Solenoid valve Type	5/2(NC)(Single Coil ,Double Coil) 5/3(NC)(center close type,center exhaust type,center pressure type)					
Reted Power	1W					
Response time		Open:9ms;	Close:10ms			
Valve Orifice	3.3mm		2.4mm			
Valve life cycles		30 millio	on times			
Number of combinations		2~	24			
Manifold material	PA6+50GF					
Valve material	Aluminium					
IP Class		IP	40			
Remark						

MINSTALL AND OPERATION

- 1. First put the connector to the P port, then put connector or slincer to the EA and EB port
- 2. Insert the wire on the manifold and tighten according to the wire guide
- 3. Connect the air source to the P port, check whether the solenoid valve of each group is controlling the Mirco valve. Without power condition, for 3/2 way solenoid (NC) type, B port is exhaust port. With Power condition, for 3/2 way solenoid valve(NC) type, A port is exhaust port.
- 4. Then connect the A and B ports of each 3/2 solenoid valve to the pneumatic actuator with an air pipe, and adjust it
- 5. Final step is put the manifold on the equipment fixed with screw

ORDERING CODE

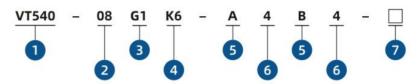

- 1. Model Series VT340 VT540
- 2. Combination 02-24
- 3. Inlet Port G1/4
- 4. Working port K4: Ф4 Quick connector K6: Φ6 Quick connector
- 5. Valve Type A: 5/2 Single Coil B: 5/2 Double Coil
- C: 5/3 Double coil center close type D: 5/3 Double coil center exhaust type
- E: 5/3 Double coil center pressure type
- 2-24


Indicator light, surge, voltage protection circuit Blank: With indicator light, no surge and voltage protection R: With indicator light,


surge and voltage protection

6. Valve Quantity

VT340 Graphy

VT540 Graphy

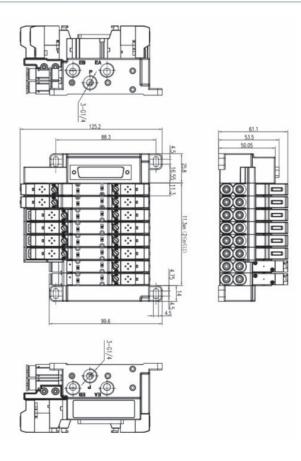

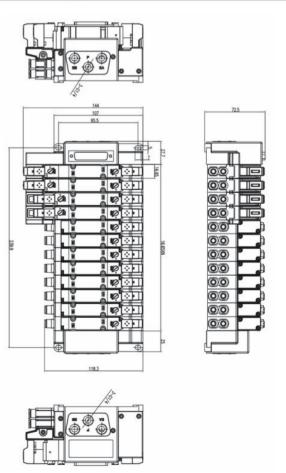




VT540/340 Manifold **Bus Interface Module**



SPECIFICATION

Project Specification	Profinet		
Control Power Supply	24VDC +-10%		
Output Power Supply	24VDC +-10%		
Internal Friction Current	Less than 100 mA		
Output Points	24 Points		
Output Load	Single Valve 24V 1W Output, 24 Valves Maximum Output Current 1.5A;		
Output Polarity	PNP,-COM		
Version	Version 2.4, Conformance Class CC-C		
Addressing mode	DCP		
Voltage Detection	Support Voltage Detection		
Reverse Connection Protection and Over-voltage Protection	Support		
IRT	YES		
MRP	YES		
Diagnose	YES		
Communication Rate	100M bps		
Communication Port	Use M12(Meet Profinet Specification)		
Communication Connection Type	Daisy Chain		
Set File	GCD File		
Authentication	EN 61000-6-4:2007+A1:2011, EN IEC 61000-6-2:2019		
EMI	CLASSA		
Power Interruptions	More than 10ms		
Withstand Voltage	GB/T24344, 500 VAC for one minute		
Insulation Resistance	GBT24343, 500VDC Voltage, Insulation at least 10 $M\Omega$		
Vibration Measurement	5G, 10~150Hz, Continuous Vibration test for 2 hours		
Working Temperature	-10~50°C		
Working Humidity	35-85%RH		

W ORDERING CODE

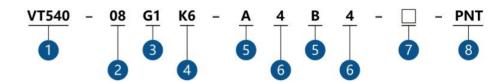



- 1. Model Series VT340 VT540
- 2. Combination 02-24
- 3. Inlet Port G1/4" 08:intake on the 8th 10:intake on the 10th (Note:08,10 can only be selected with protocol types)
- 4. Working port K4: Φ4 Quick connector K6: Φ6 Quick connector
- 5. Valve Type A: 5/2 Single Coil B: 5/2 Double Coil C: 5/3 Double coil center close type
 - D: 5/3 Double coil center exhaust type E: 5/3 Double coil center pressure type
 - 6. Valve Quantity 2-24

- 7. Indicator light, surge, voltage protection circuit Blank: With indicator light, no surge and voltage protection R: With indicator light, surge and voltage protection
- 8. Protocol types PNT: Profinet ECT: EtherCAT


VT340 Graphy

<u>@</u>

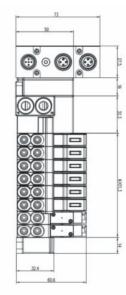

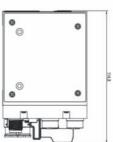


VT540 Graphy

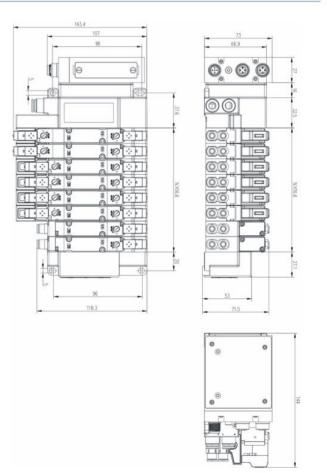



Appearance and Interface

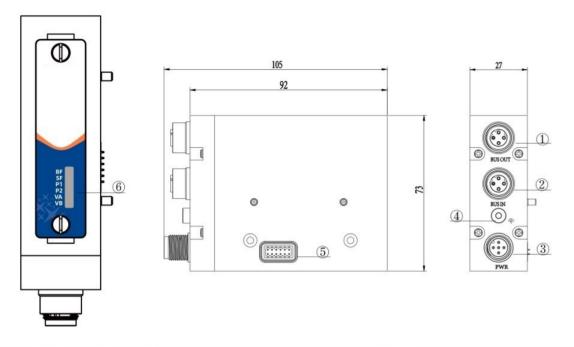


No.	Definition	Description	
1	P1	Interface 1 PORT OUT, M12 Female, 4-pin, D-coded	
2	P2	Interface 2 PORT IN, M12 Female, 4-pin, D-coded	
3	Current	Input Power, M12 Male, 5-pin, A-coded	
4	Ground Connection	Ground Terminal	
5	Output	12PIN	
6	Indicator Light	Status Display	

P1\P2: M12 4PIN socket, D-coded



No.	Definition	Description
1	TD+	Transmit Data +
2	RD+	Receive Data +
3	TD-	Transmit Data -
4	RD-	Receive Data -

PWR: M12 5PIN plug, A-coded

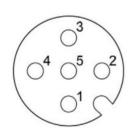

No.	Definition	Description	
1	V1 24V	+24V for solenoid valve	
2	V1 0V	0V for solenoid valve	
3	V2 24V	+24V for V2 unit operation	
4	V2 0V	0V for V2 unit operation	
5	FE	Function Ground Connection	

Indicator Light

No.	Definition	Indicator	Description
		Light Off	PROFINET software is not initialized
		Red Light Normally On	Equipment Offline
1	BF	Red Light Single Flash	Hardware Configuration and Parameterization are not reasonable
		Red Light Flash Three Times	IOPS = BAD (PLC Stop)
		Green Light Normally On	Communication is Normal
		Light Off	The device was not initialized
		Red Light Normally On	Hardware Failure
		Red Light Flash Slowly	Open circuit Fault
2	SF	Red Light Flash Swiftly	Short Circuit Fault
		Red Light Double Flash	Error, Internal Communication
		Red Light Flash Three Times	A Fatal Error
		Green Light Normally On	Module is Normal
		Light Off	Link Lost Connection
3	P1	Yellow Light On Green Light Flashes	Link Communication Activation
		Yellow Light On / Green Light ON	Link Communication Establishment
		Light Off	Link Lost Connection
4	P2	Yellow Light On / Green Light Flashes	Link Communication Activation
		Yellow Light On / Green Light ON	Link Communication Establishment
		Green Light Normally On	Manifold Power Supply , Normal
5	VA	Red Light Flashes	Manifold Power Supply , Under voltage
		Red Light Normally On	Manifold Power Supply, Over voltage
		Green Light Normally On	System Power Supply , Normal
6	VB	Red Light Flashes	System Power Supply , Under voltage
		Red Light Normally On	System Power Supply, Over voltage

Input and Output Data List

4.1 Input list

	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
BYTE0		ос	sc	COR	UV_V2	OV_V2	UV_V1	OV_V1
BYTE1	SC_7	SC_6	SC_5	SC_4	SC_3	SC_2	SC_1	SC_0
BYTE2	SC_15	SC_14	SC_13	SC_12	SC_11	SC_10	SC_9	SC_8
BYTE3	SC_23	SC_22	SC_21	SC_20	SC_19	SC_18	SC_17	SC_16
BYTE4	OC_7	OC_6	OC_5	OC_4	OC_3	OC_2	OC_1	OC_0
BYTE5	OC_15	OC_14	OC_13	OC_12	OC_11	OC_10	OC_9	OC_8
BYTE6	OC_23	OC_22	OC_21	OC_20	OC_19	OC_18	OC_17	OC_16
ВҮТЕ7	COUNT_7	COUNT_6	COUNT_5	COUNT_4	COUNT_3	COUNT_2	COUNT_1	COUNT_0
BYTE8	COUNT_15	COUNT_14	COUNT_13	COUNT_12	COUNT_11	COUNT_10	COUNT_9	COUNT_8
BYTE9	COUNT_23	COUNT_22	COUNT_21	COUNT_20	COUNT_19	COUNT_18	COUNT_17	COUNT_16

BYTE0:

Indicator	Description						
bit7	Reserve						
bit6	1 Open Circuit Detected	1 Open Circuit Detected 0 No Open Circuit Detected					
bit5	1 Short Circuit Detected	1 Short Circuit Detected 0 No Short Circuit Detected					
bit5	1 The switch count has reached the upper threshold	0 The switch count donot reach the upper threshold					
	0:0	Electronics power supply Normal					
bit3:bit2	0:1	Electronics power supply Over Voltage					
	1:0	Electronics power supply Under Voltage					
	0:0	Valves power supply Normal					
bit1:bit0	0:1	Valves power supply Over Voltage					
	1:0	Valves power supply Under Voltage					

BYTE1: BYTE:

Sc-0 corresponds to the short circuit of channel 0, SC-23 corresponds to the short circuit of channel 23, and so on to know the short circuit of each channel. Bit value: 1 Short circuit, 0 indicates no short circuit.

BYTE4: BYTE6

0C-0 corresponds to the open status of channel 0, OC-23 corresponds to the open status of channel 23, and so on to know the open status of each channel. The Bit value is 1 Open circuit, and 0 indicates no open circuit.

BYTE7: BYTE9

Count-0 indicates the open status of channel 0, count-23 indicates the open status of channel 23, and so on to know the open status of each channel. The Bit value is 1 Open circuit, and 0 indicates no open circuit.

4.2 Output List

	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
BYTE0	SC_7	SC_6	SC_5	SC_4	SC_3	SC_2	SC_1	SC_0
BYTE1	SC_15	SC_14	SC_13	SC_12	SC_11	SC_10	SC_9	SC_8
BYTE2	SC_23	SC_22	SC_21	SC_20	SC_19	SC_18	SC_17	SC_16

 $O_0 \sim O_23: O_0 \ indicates \ Channel\ 0,\ O_23 \ indicates \ Channel\ 23,\ and\ so\ on\ to\ know\ the\ location\ of\ other\ channels.$

4.3 Error Code

Error Code (Hexadecimal)	Error Description	LED State	
0x00	0x00, Normal	"SF" LED, Green Light Normally On	
0x01	Manifold , Coil Short circuit	"SF" LED, Red Light Flashes	
0x06	Manifold, Coil Open Circuit	"SF" LED, Red Light Flashes	
0x07	N/A		
0x100	The power supply to the module is under voltage	"V2" LED, Red Light Flashes	
0x101	The power supply to the module is over voltage	"V2" LED, Red Light Normally On	
0x102	The power supply to the manifold is under voltage	"V1" LED, Red Light Flashes	
0x103	The power supply to the manifold is over voltage	"V1" LED, Red Light Normally On	




SPECIFICATION

Project Specification	Ethercat		
Control Power Supply	24VDC +-10%		
Output Power Supply	24VDC +-10%		
Internal Friction Current	Less than 100 mA		
Output Points	24 Points		
Output Load	Single Valve 24V 1W Output, 24 Valves Maximum Output Current 1.5A;		
Output Polarity	PNP,-COM		
Version	Test Record V.1.2.8		
EtherCAT mode	Direct Mode		
Address Set	Automatic Setting		
DC Mode	Support, Distributed clocks		
Voltage Detection	Support Voltage Detection		
Reverse Connection Protection and Over-voltage Protection	Support		
Diagnose	Open Circuit, Short Circuit, Switch Counting Diagnostic Function		
Communication Rate	100M bps		
Communication Port	Use M12(Meet EthernetCAT Specification)		
Communication Connection Type	Daisy Chain		
Set File	XML File		
Authentication	EN 61000-6-4:2007+A1:2011, EN IEC 61000-6-2:2019		
EMI	CLASSA		
Power Interruptions	More than 10ms		
Withstand Voltage	GB/T24344, 500 VAC for one minute		
Insulation Resistance	GBT24343, 500VDCVoltage, Insulation at least 10 $M\Omega$		
Vibration Measurement	5G, 10~150Hz, Continuous Vibration test for 2 hours		
Working Temperature	-10~50℃		
Working Humidity	35-85%RH		



Appearance and Interface

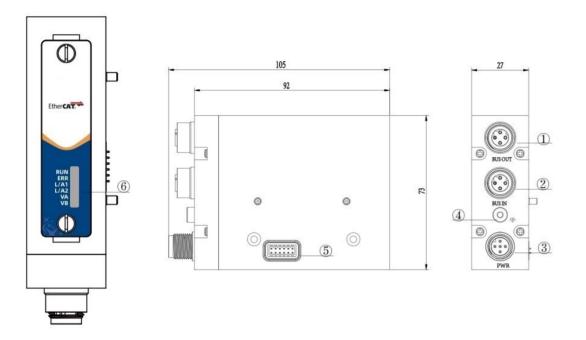


No. Definition De		Description	
1	P1	Interface 1 PORT OUT, M12 Female, 4-pin, D-coded	
2	P2	Interface 2 PORT IN, M12 Female, 4-pin, D-coded	
3	Current	Input Power, M12 Male, 5-pin, A-coded	
4	Ground Connection	Ground Terminal	
5	Output	12PIN	
6	Indicator Light	Status Display	

P1\P2: M12 4PIN socket, D-coded



No.	Definition	Description		
1	TD+	Transmit Data +		
2	RD+	Receive Data +		
3	TD-	Transmit Data -		
4	RD-	Receive Data -		

PWR: M12 5PIN plug, A-coded

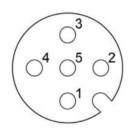

No.	Definition	Description
1	V1 24V	+24V for solenoid valve
2	V1 0V	0V for solenoid valve
3	V2 24V	+24V for V2 unit operation
4	V2 0V	0V for V2 unit operation
5	FE	Function Ground Connection

Indicator Light

No.	Definition	Indicator	Description			
		Green Light Out	The device is in INIT state			
	DUN	Green Light Flashes	The device is in SAFEOP state			
1	RUN	Green Light Single Flash	The device is in PREOP state			
		Green Light Normally On	The device is in OP state			
		Red Light Out	Configuration Error			
	500	Red Light Flashes	No Error			
2	ERR	Red Light Single Flash	Local Equipment Error			
		Red Light Double Flash	The watchdog is out of time			
		Light Out	Connection not established			
3	L/A1	Green Light On	Connection Established , No Communication			
		Green Light Flashes	Connection Established , Has Communication			
		Light Out	Connection Established , No Communication			
4	L/A2	Green Light On	Connection not established			
		Green Light Flashes	Connection Established , Has Communication			
		Green Light On	Manifold Power Supply , Normal			
5	VA	Red Light Flashes	Manifold Power Supply , Under voltage			
		Red Light On	Manifold Power Supply, Over voltage			
		Green Light On	System Power Supply , Normal			
6	VB	Red Light Flashes	System Power Supply , Under voltage			
		Red Light On	System Power Supply, Over voltage			

Input and Output Data List

4.1 Input list

	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
BYTE0		ос	sc	COR	UV_V2	OV_V2	UV_V1	OV_V1
BYTE1	SC_7	SC_6	SC_5	SC_4	SC_3	SC_2	SC_1	SC_0
BYTE2	SC_15	SC_14	SC_13	SC_12	SC_11	SC_10	SC_9	SC_8
ВҮТЕ3	SC_23	SC_22	SC_21	SC_20	SC_19	SC_18	SC_17	SC_16
BYTE4	OC_7	OC_6	OC_5	OC_4	OC_3	OC_2	OC_1	OC_0
BYTE5	OC_15	OC_14	OC_13	OC_12	OC_11	OC_10	OC_9	OC_8
ВҮТЕ6	OC_23	OC_22	OC_21	OC_20	OC_19	OC_18	OC_17	OC_16
ВҮТЕ7	COUNT_7	COUNT_6	COUNT_5	COUNT_4	COUNT_3	COUNT_2	COUNT_1	COUNT_0
BYTE8	COUNT_15	COUNT_14	COUNT_13	COUNT_12	COUNT_11	COUNT_10	COUNT_9	COUNT_8
BYTE9	COUNT 23	COUNT 22	COUNT 21	COUNT 20	COUNT 19	COUNT 18	COUNT 17	COUNT 16



BYTE0:

Indicator	Description					
bit7	Res	erve				
bit6	1 Open Circuit Detected	0 No Open Circuit Detected				
bit5	1 Short Circuit Detected	0 No Short Circuit Detected				
bit4	1 The switch count has reached the upper threshold	0 The switch count donot reach the upper threshold				
	0:0	Electronics power supply Normal				
bit3:bit2	0:1	Electronics power supply Over Voltage				
	1:0	Electronics power supply Under Voltage				
	0:0	Valves power supply Normal				
bit1:bit0	0:1	Valves power supply Over Voltage				
	1:0	Valves power supply Under Voltage				

BYTE1: BYTE3

Sc-0 corresponds to the short circuit of channel 0, SC-23 corresponds to the short circuit of channel 23, and so on to know the short circuit of each channel. Bit value: 1 Short circuit, 0 indicates no short circuit.

BYTE4: BYTE6

0C-0 corresponds to the open status of channel 0, OC-23 corresponds to the open status of channel 23, and so on to know the open status of each channel. The Bit value is 1 Open circuit, and 0 indicates no open circuit.

BYTE7: BYTE9

Count-0 indicates the open status of channel 0, count-23 indicates the open status of channel 23, and so on to know the open status of each channel. The Bit value is 1 Open circuit, and 0 indicates no open circuit.

4.2 Output List

	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
BYTE0	SC_7	SC_6	SC_5	SC_4	SC_3	SC_2	SC_1	SC_0
BYTE1	SC_15	SC_14	SC_13	SC_12	SC_11	SC_10	SC_9	SC_8
BYTE2	SC_23	SC_22	SC_21	SC_20	SC_19	SC_18	SC_17	SC_16

 $O_0 \sim O_23: O_0 \ indicates \ Channel\ 0,\ O_23 \ indicates \ Channel\ 23,\ and\ so\ on\ to\ know\ the\ location\ of\ other\ channels.$

Manifold Adapters


FEATURES

The Valve Manifold Adapter VTA-H24-COM13 is an IO-Link device for installed on DB25-connected valve manifold. It is a signal conversion module that converts the DB25 connection into an IO-Link connection. It adopts a 3-wire connection with an IO-Link Type-A port, and supports the drive of 24 solenoid valves, with a total drive current of no more than 1.6A, and a maximum of 500mA for a single circuit. The adapter is powered from the IO-Link master. Applicable to valve terminals with 13-pin DB25 connector as the common end.

SPECIFICATION

ModelNe	VT1 1104 001440				
Model No.	VTA-H24-COM13				
IO-Link version	V1.1.3				
Rate	COM2(38.4k)				
Min. cycle time	3.5ms				
Process data	4 bytes				
Display/Running	Green LED				
Configurable Inputs & Outputs	NO				
Working Voltage	18~30VDC				
Total current (actuator)	1.6A				
Quiescent current	30mA				
Typical Working Voltage	24VDC				
Actuator connection port	DB25				
Sensor connection port	M12x1				
Wire	0.6m*0.34mm2				
Shell material	PA				
Sheath material	PUR				
Protection class	IP40				
Operating temperature	10~55℃				
Storage temperature	25~70℃				
Mechanical dimensions	62mm*52mm*12mm				

Dimension Graphy

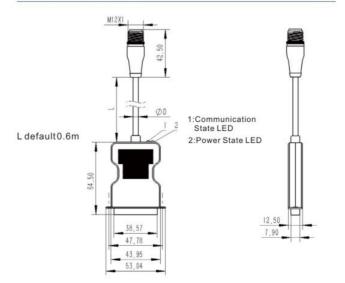

Connection method



PIN1~12,14~25:output PIN13:0V



IO-Link Connector PIN1:+24V,Controller+valve PIN3:0V PIN4:IO-Link